


6" maximum spacing

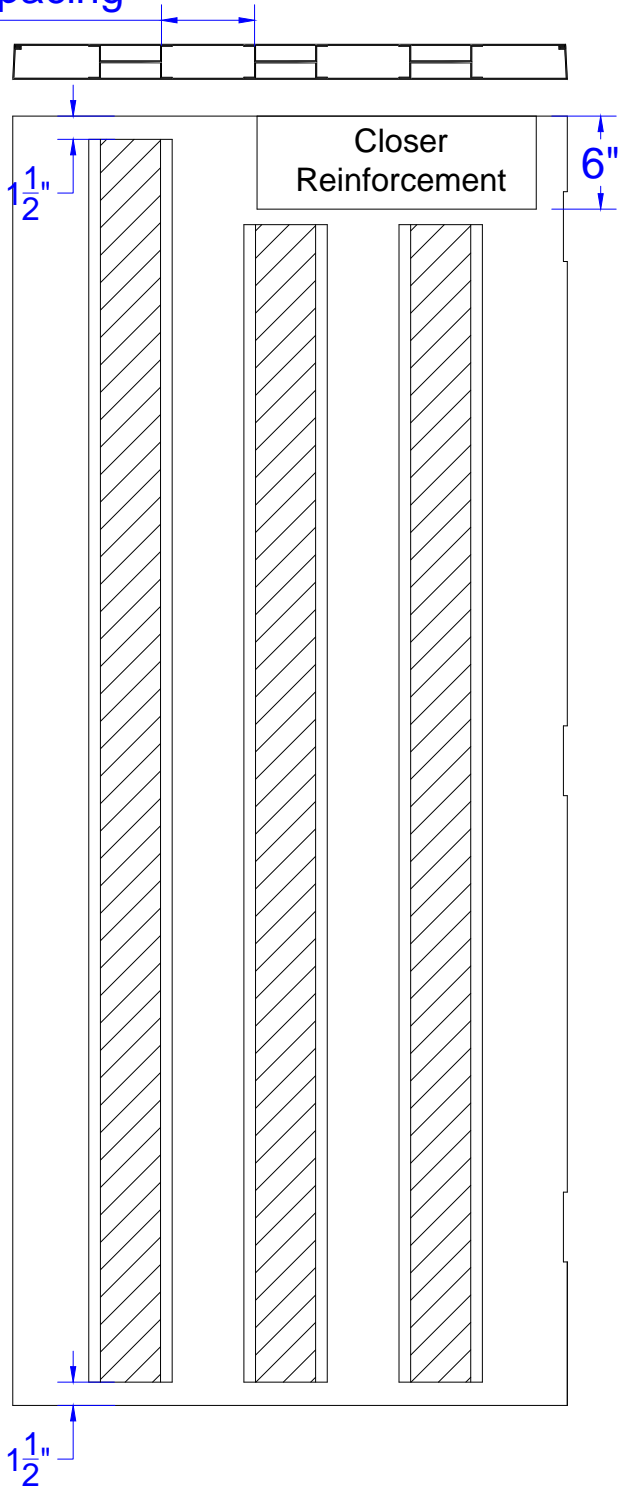

Width of door	Stiffener Width	# of stiffeners
24"	4"	4
26"	4"	4
28"	4"	6
30"	4"	6
32"	4"	6
34"	4"	6
36"	4"	6
38"	4"	8
40"	4"	8
42"	4"	8
44"	4"	8
46"	4"	8
48"	4"	10
50"	4"	10
52"	4"	10
54"	4"	10
56"	4"	10
58"	4"	12
58 7/16"	4"	12

Distance from lock edge is 6" maximum

Spacing between stiffeners is 6" maximum

Stiffener height = vertical space - 3"  
 (For example, if net height is 83 1/4" stiffeners will be 80")

If door is closer reinforced, 4 stiffeners need to be downsized an additional 6"  
 (For example, if door has 6 stiffeners and is 83 1/4" tall, 4 stiffeners will be 74")

**Concept Frames, Inc.**  
 2015 Industrial Drive, Newton, NC 28658  
 PH: 888-234-9455 Fax: 800-631-9089  
[www.ConceptFrames.Com](http://www.ConceptFrames.Com)

Drawn By: KX

Date: 2-20-2015

Door Stiffener Worksheet